



INSTALLATION GUIDE & OPERATION MANUAL ASPEN R410a MULTI-POSITION AIR HANDLERS

LGM SERIES – MULTI-POSITION AIR HANDLER - ALUMINUM COIL



CONTENT

1. Important Safety Instructions
2. Introduction & General Information
3. Inspection
4. Installation Instructions and Clearances
5. Installation
6. Connecting Refrigerant Lines
7. Metering Devices / Liquid Line Connection
8. Leak Check / Standing Pressure Test / Vacuum Test
9. Electrical Line Voltage Wiring
10. Low Voltage Connections
11. Air Volume Adjustment
12. System Charging
13. Final System Checkout
14. Wiring Diagrams

1. IMPORTANT SAFETY INSTRUCTION

Potential safety hazards are alerted using the following symbols. The symbol is used in conjunction with terms that indicate the intensity of the hazard. It is the responsibility of the owner and the installer to read and comply with the safety information and the instructions accompanying these symbols.



Read the precautions in this manual carefully before operating the unit.



Read the instructions in this manual carefully before operating the unit.



Read the instructions in this manual carefully before servicing the unit.



Read the instructions in this manual carefully before wiring the unit.



Warning or Caution

▲ WARNING

This symbol indicates a potentially hazardous situation, which if not avoided, could result in serious injury, property damage, product damage or death.

▲ CAUTION

This symbol indicates a potentially hazardous situation, which if not avoided, may result in moderate injury or property damage.

▲ WARNING

Certified technicians or those individuals meeting the requirements specified by NATE may use this information. Property and product damage or personal injury hazard may occur without such background.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children must be supervised to ensure that they do not play with the appliance.

Product designed and manufactured to permit installation in accordance with local and national building codes. It is the installer's responsibility to ensure that the product is installed in strict compliance with the aforementioned codes. Manufacturer assumes no responsibility for damage (personal, product or property) caused due to installations violating regulations.

▲ WARNING

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury, or death.

▲ WARNING

This unit is not approved for outdoor installations.

▲ WARNING

HAZARDOUS VOLTAGE!

Failure to follow this warning could result in property damage, severe personal injury, or death.

Disconnect ALL electric power, including remote disconnects before servicing. Follow proper lockout/tagout procedures to ensure the power cannot be inadvertently energized

▲ WARNING

The unit is designed for operation with 120 V, single phase, 60 Hz power supply. Aspen will not be responsible for damages caused due to modification of the unit to operate with alternative power sources.

WARNING

When this unit is installed in an enclosed area, such as a garage or utility room with any Carbon Monoxide producing devices (i.e. automobile, space heater, water heater etc.) ensure that the enclosed area is properly ventilated.

▲ WARNING

This product designed and manufactured to permit installation in accordance with local and national building codes. It is the installer's responsibility to ensure that product is installed in strict compliance with national and local codes. Manufacturer takes no responsibility for damage (personal, product or property) caused due to installations violating regulations. Installation of this unit shall be made in accordance with the National Electric Code, NFPA No. 90A and 90B, and any other local codes or utilities requirements.

▲ WARNING

Do not bypass safety devices.

▲ WARNING

PRESURIZED REFRIGERANT!

Failure to follow this warning could result in personal injury. System contains oil and refrigerant under high pressure. Recover refrigerant before opening the system. Do not use non-approved refrigerants or refrigerant substitutes or refrigerant additives.

▲ WARNING

If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.

▲ CAUTION

Only factory authorized kits and accessories should be used when installing or modifying this unit unless it is so noted in these instructions. Some localities may require a licensed installer/service personnel.

▲ WARNING

This product can expose you to chemicals including lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.65Warnings.ca.gov

▲ WARNING

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).

Do not pierce or burn.

Be aware that refrigerants may not contain an odor.

- This appliance shall be installed in accordance with national wiring regulations.
- The of the space necessary for correct installation of the appliance including the minimum permissible distance to adjacent structures is specified in Section 5 of this manual under "INSTALLATION INSTRUCTIONS AND CLEARANCES".
- For air handlers with supplementary heaters, the minimum clearance from the appliance to combustible surfaces is specified in Section 5 of this manual under "INSTALLATION INSTRUCTIONS AND CLEARANCES", the equipment was tested for 0" clearance.
- A wiring diagram with clear indication of the connections to external control devices and supply cord can be found in Section 16 of this manual.
- The range of external static pressure at which the appliance was tested (add-on heat pumps and ducted appliances with supplementary heaters only) is available in section 12 of this manual.
- The method of connecting the appliance to the electrical supply and interconnection of separate components is detailed in Section 11, LOW VOLTAGE CONNECTIONS and in Section 14, WIRING DIAGRAMS.
- None of the components in this product family are designed or approved to be suitable for outdoor use.

This Air Handler unit is a PARTIAL UNIT AIR CONDITIONER, complying with PARTIAL UNIT requirements of Standard UL 60335-2-40/CSA 22.2 NO. 60335-2-40, and must only be connected to other units that have been confirmed as complying to corresponding PARTIAL UNIT requirements of this Standard.

This appliance is not intended for use at altitudes exceeding 2,000 meters.

2. INTRODUCTION & GENERAL INFORMATION

These air handlers are versatile multi-positional unit with the following standard features:

- **Application Versatility:** This unit is designed for use in upflow, downflow, horizontal left and horizontal right applications. Follow section 5 & 6 for installation and conversion instructions.
Can be AHRI matched with most brands of air conditioners or heat pumps outdoor sections R22 or R410a REFRIGERANT when proper metering device is used.
Product design for use with R22 or R410a refrigerant specified on the nameplate.
- **Motor:** Constant torque ECM speeds and torques are controlled by software embedded in the motor to maintain constant torque. Motors are pre-programmed at the factory.

- **Cabinet:** Sturdy, short, galvanized steel cabinet with painted front panels. Cabinet fully insulated with 1/2" faced insulation to prevent sweating and mold growth, to encapsulate glass fibers, and to provide excellent R-value. Stick pins ensure insulation remains in place. Units ship with disposable filter in filter rack.
- **Blower:** Direct drive multi-speed blowers circulate air quietly and efficiently. Motor speeds can be easily selected via motor terminals. Swing mounted blowers can be easily removed for service.
- **Electronic Circuit Board:** Electronic circuit board provides 30 sec. ON/OFF blower time delay extracting more heat/cool from the coil
- **DX Coil:** High efficiency rifled aluminum tubes and enhanced aluminum fins provide maximum heat transfer. All coils factory leak tested with two-stage pressure decay and mass spectrometer process then nitrogen pressurized, and factory sealed for maximum reliability. Coil mounted Schrader allows pre-installation pressure testing. Available with either check style flowrater or TXV metering device. Field-installable TXVs are also available. Rugged GLP drain pan holds minimal condensate while eliminating the possibility of corrosion. Drain pans are UV safe. GLP drain pans with bottom primary and secondary drain connections or alternate right-side primary. All connections 3/4" FPT. Access door allows for coil cleaning.
- **Warranty:** Ten-year limited parts warranty.

3. INSPECTION

On receiving the product, visually inspect it for any major shipping related damages. Shipping damages are the carrier's responsibility. Inspect the product labels to verify the model number and options are in accordance with your order. Manufacturer will not accept damage claims for incorrectly shipped product.

4. INSTALLATION INSTRUCTIONS AND CLEARANCES

This unit is designed for zero clearance installation on three sides and adequate clearance to provide access for service in the front. A minimum of 2.5 – 3.5 feet clearance is recommended on the front end (Fig 5.1).

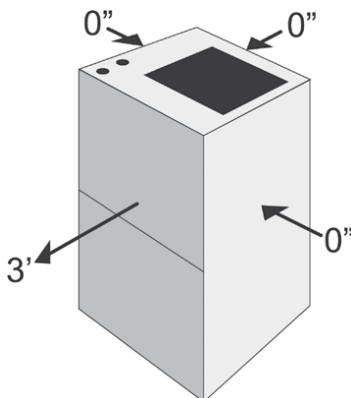


Fig 5.1. Minimum Clearance for Air Handler

4.1. Mounting Option

If the unit is to be installed in garages, warehouses or other areas

where they may be subjected to physical damage, adequate protective barriers must be installed. Unit must be installed 18" away from source of ignition.

If the unit is located in high humidity areas like attics or unconditioned garage; the air handler casing might experience nuisance sweating. In such installation scenarios, wrapping the casing with a 2" fiberglass insulation with vapor barrier should be used.

4.2. Condensate Drain Preparation

4.2.1. Condensate Drain

- Condensate drain is located at front as shown in picture with primary and secondary drain port.
- Pipe condensate system using proper PVC fittings.
- Ensure a minimum 2" trap is installed in the condensate drain. Locate the trap near to the connection opening on the air handler. See illustration.



Fig 5.2a

An auxiliary drain pan must be provided by the installer and placed under the entire unit with a separate drain line that is properly sloped and terminated in an area visible to the homeowner. The auxiliary pans provide extra protection to the area under the unit should the primary and secondary drain plug up and overflow. As expressed in our product warranty; **ASPEN WILL NOT BE BILLED FOR ANY STRUCTURAL DAMAGES CAUSE BY FAILURE TO FOLLOW THIS INSTALLATION REQUIREMENT.** The drains from the auxiliary drain pan must be installed according to the local building codes.

▲ CAUTION

Drain lines from the auxiliary drain pan should **NOT** be connected to the primary drain line of the coil.

The drain lines must be installed with 1/4" per foot pitch to provide free drainage. A condensate trap **MUST** be installed on the primary drain line to ensure proper drainage of the condensate. The trap must be installed in the drain line below the bottom of the drain pan (Fig. 5.2b)

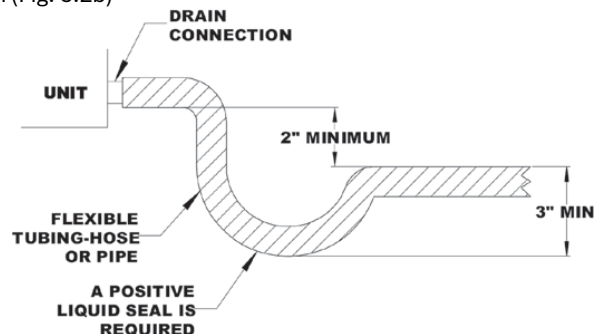


Fig. 5.2b Condensate Drain Trap

▲ CAUTION

Since coil is upstream of the blower, all drains **MUST** be trapped or sealed. Failure to do so will result in condensate overflow from the drain pan. Aspen will **NOT** be responsible for any damages resulting from failure to follow these instructions.

▲ CAUTION

If the drain pan is constructed of nylon or plastic; use Teflon tape to connect the drain lines to the threads in the drain pan. **DO NOT USE SOLVENT BASED PIPE DOPE. THIS WILL REDUCE THE LIFE OF THE PAN.**

The drain pan has primary (white) and secondary (red) drain connections. If a secondary drain line is required, it should be run separately from the primary and should terminate in a highly visible location.

Condensate disposal through the secondary drain line indicates that the primary drain line is plugged and needs cleaning. If a secondary drain line will not be provided, plug the secondary drain. Drain plugs are **NOT** to be reused without plumbers' tape or putty. Drain line connection should be finger tightened, then turned no more than one complete turn as needed to ensure a firm connection. **DO NOT** overtighten connection or damage may occur.

4.3. Ductwork

Duct systems should be installed in accordance with standards for air-conditioning systems, National Fire Protection Association Pamphlet No. 90A or 90B. They should be sized in accordance with National Environmental System Contractors Association Manual K, or whichever is applicable.

On any job, non-flammable flexible collars should be used for the return air and discharge connections to prevent transmission of vibration (Fig 5.3). Although these units have been specially designed for quiet vibration-free operation, air ducts can act as soundboards, can, if poorly installed, amplify the slightest vibration to the annoyance level.



Fig 5.3

All main supply and return air drops should be properly sized as determined by the designer of the duct system and should not necessarily be the size of the duct flange openings of the unit. (The duct size should never be smaller than the flange openings of the air handler supply and return air openings.)

Filter sizes vary for each model (see spec sheet) that needs to be installed in the filter rack that is provided (Fig 5.4). Inspect and clean or replace filter every month. A blocked filter reduce airflow to the coil and hinder the performance of the system.

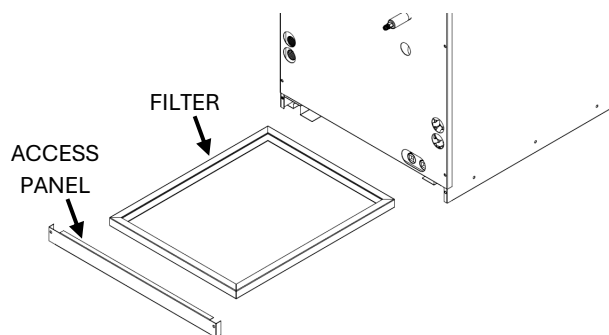


Fig 5.4

It is recommended that wherever supply and return air sheet metal ducts pass through unconditioned areas, they be insulated to pre-vent excessive heat loss during heating operation. When applied in conjunction with summer air conditioning, sheet metal duct routed through unconditioned areas should be insulated and have an outside vapor barrier to prevent formation of condensation.

5. INSTALLATION

▲ CAUTION

Ensure that the unit is adequately sized. The tonnage of the outdoor unit should never exceed the tonnage of this unit.

▲ WARNING

The coil was manufactured with a dry nitrogen pre-charge. Release the pressure through the Schrader valve test port prior to installation. If holding pressure is not present, return coil to distributor for exchange.

▲ CAUTION

Some Aspen coils may include a Schrader valve on the suction manifold. Ensure that the Schrader valve and valve core (where present) are protected from heat during brazing and installation to prevent leakage. Use a core removal tool to temporarily remove the core when brazing. Replace the core once brazing is completed.

▲ CAUTION

Insulation on the suction line **MUST extend into the cabinet and continue as far as possible to eliminate condensate dripping onto the access door.**

- ✓ Clean coil fins with degreasing agent or mild detergent and rinse fins clean prior to installation.
- ✓ The refrigerant line sizes should be selected according to the recommendations of the outdoor unit manufacturer.
- ✓ Care must be taken to ensure all connection joints are burr-free and clean. Failure to do so may increase chances of a leak. It is recommended to use a pipe cutter to remove the spun closed end of the suction line.
- ✓ To reduce air leakage, rubber grommets may be present where the lines pass through the coil case. To avoid damage, remove

grommets prior to brazing by sliding over the lines. Use a quenching cloth or allow the lines to cool before reinstalling the grommets.

✓ Use of wet rags/quenching cloth is highly recommended to prevent weld-related damages to the casing and Schrader valve (if present).

5.1. Air Handler Orientation

This unit can be installed in upflow, counterflow, horizontal right and horizontal left discharge. See Fig. 5.1-A

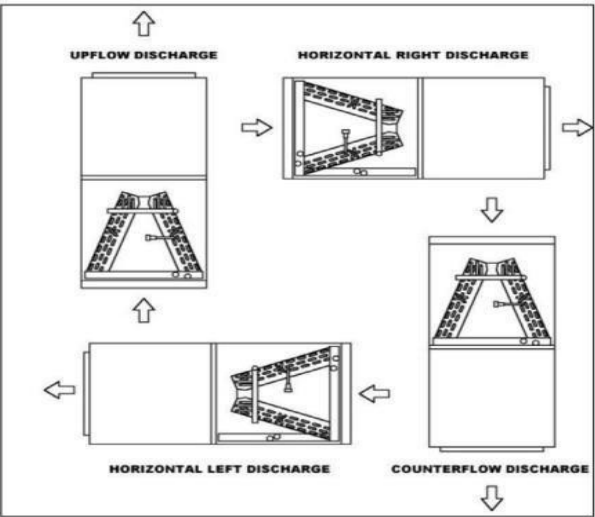


Fig 5.1-A

When installing in an upflow or counterflow discharge it is recommended to remove the horizontal drain pan that comes with the unit. See Fig. 5.1-B



Fig 5.1-B

5.1.1 Horizontal Left-Hand Discharge Conversion


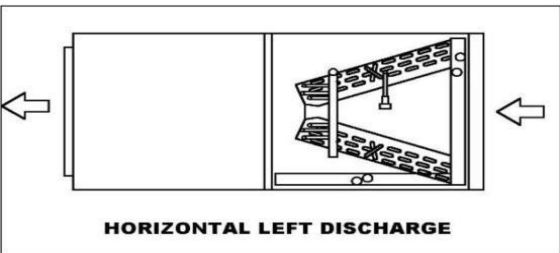


Fig 5.1.1


1. Remove all access panels.	
2. Pull out the coil and remove the horizontal drain pan.	
3. Install the horizontal drain pan that was pull out to the left-hand side of the coil.	
4. Re-install the coil back to the cabinet and mount the access panels back into the unit.	

5.1.2 Counterflow or Downflow Conversion


1. Unscrew and open the access panels – upper (1), lower (2) and filter cover (3). Pull-out the filter (4), coil assembly (5) and discard horizontal pan (6) then unscrew the coil deck (7) and filter rail (8) on both sides of the cabinet before pulling out as shown in figure below.

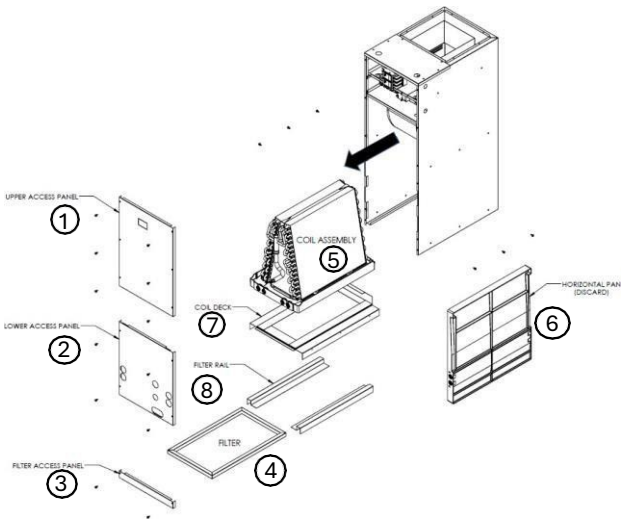


2. Rotate the unit 180° as shown in the figure

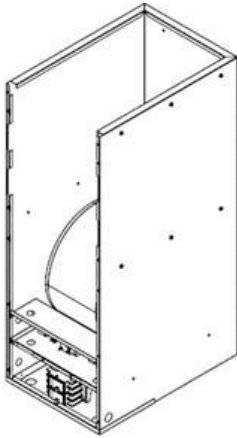


3. Re-install the coil deck (7), filter rail (8) and filter (4) as shown in figure below.

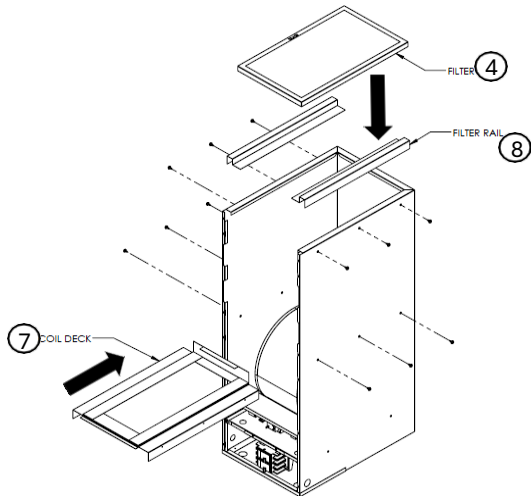

4. Add Block Off Plate (9) on coil assembly (5).

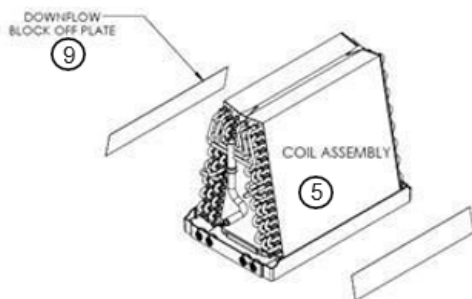

5. Slide the coil assembly (5) back into the cabinet then finally re-install and fasten all the access panels – filter cover (3), lower (2), and upper (1) as shown in figure below.

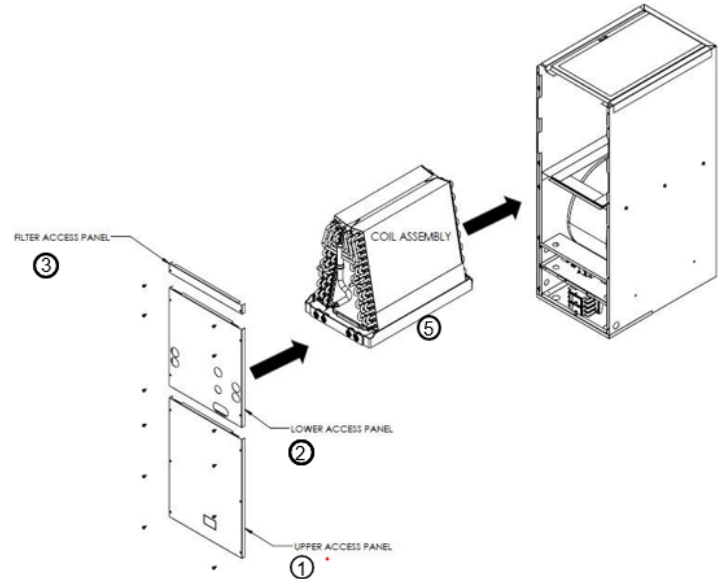

5.2. Connecting Ducting

- 5.2.1. Secure supply air ducting to the top of the air handler. Canvas connectors are recommended for reducing potential noise transmission.

6. CONNECTING REFRIGERANT LINES

▲ WARNING

The coil is manufactured with dry nitrogen pre-charge. Release the pressure through the Schrader valve test port prior to installation. If holding pressure is not present, return coil to distributor for exchange.

▲ NOTICE

Refrigerant tubing must be routed to allow accessibility for service and maintenance of the unit.

Pipe-work including piping material, pipe routing, and installation shall include protection from physical damage in operation and service, and be in compliance with national and local codes and standards, such as ASHRAE 15, ASHRAE 15.2, IAPMO Uniform Mechanical Code, ICC International Mechanical Code, or CSA B52. All field joints shall be accessible for inspection prior to being covered or enclosed.

After completion of field piping for split systems, the field pipework shall be pressure tested with an inert gas and then vacuum tested prior to refrigerant charging, according to the following requirements:

The minimum test pressure for the low side of the system shall be the low side design pressure and the minimum test pressure for the high side of the system shall be the high side design pressure, unless the high side of the system, cannot be isolated from the low side of the system in which case the entire system shall be pressure tested to the low side design pressure.

Field-made refrigerant joints indoors shall be tightness tested. The test method shall have a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the

maximum allowable pressure. No leak shall be detected. REFER TO SECTION 13 FOR SYSTEM CHARGING INSTRUCTIONS.

Clean coil fins with degreasing agent or mild detergent and rinse fins clean prior to installation. Refer to Section 10 of this manual for coil cleaning / maintenance guidance.

The refrigerant line sizes should be selected according to the recommendations of the outdoor unit manufacturer.

Care must be taken to ensure all connection joints are burr-free and clean. Failure to do so may increase chances of a leak. It is recommended to use a pipe cutter to remove the spun closed end of the suction line.

To reduce air leakage, rubber grommets may be present where the lines pass through the coil case. To avoid damage, remove grommets prior to brazing by sliding over the lines. Use a quenching cloth or allow the lines to cool before reinstalling the grommets.

Use of wet rags/quenching cloth is highly recommended to prevent weld-related damage to the casing and Schrader valve (if present).

▲ WARNING

The coils may include a Schrader valve on the suction manifold. Ensure that the Schrader valve and valve core (where present) are protected from heat to prevent leakage.

- 6.1. Release nitrogen holding charge by depressing the Schrader Valve on the coil. If no gas releases from the coil, contact distributor regarding potential leak.



Fig 6.1

- 6.2. Cut off the liquid line connection from the coil. Use a tubing cutter for this step. Clean the burr from the cut tubing to reduce the chance of future leaks. Connect the liquid line coming from the outdoor to the liquid line at the indoor unit.



Fig 6.2

- 6.3. Use a tubing cutter to cut the suction line connection at the air handler. Clean the burr from the cut tubing to reduce the chance of future leaks. Connect the suction line coming from the outdoor to the suction line at the indoor unit.



Fig 6.3

- 6.4. To avoid heat damage to grommets where present, remove these prior to brazing by sliding them over the refrigerant lines and out of the way.
- 6.5. Check to determine if the evaporator coil has a Schrader fitting on the suction manifold. If yes, remove the valve core to prevent heat damage during brazing. Replace the valve core once the piping has cooled.
- 6.6. If the air handler has a TXV metering device, remove the sensing bulb from the suction line prior to brazing to prevent heat damage from occurring. Replace the sensing bulb once the piping has cooled.



Fig 6.6a

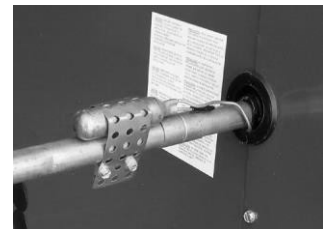


Fig 6.6b

- 6.7. Flow nitrogen through the piping when brazing.
- 6.8. Braze both refrigerant line connections using proper brazing procedures.
- 6.9. When all line connections are brazed, perform a proper system evacuation procedure per the outdoor unit manufacturer instructions.
- 7.10 Seal the penetration openings where the lineset piping enters the air handler cabinet.

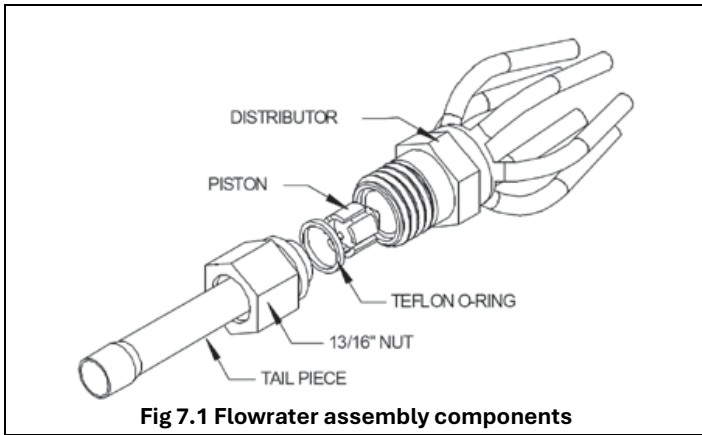


Fig 6.10

7. METERING DEVICES / LIQUID LINE CONNECTION

Aspen coils are available with two kinds of metering devices a) flowrater / fixed orifice, or b) TXV. The following instructions are separated into sections by metering device.

7.1 Flowrater / Piston or Fixed Orifice



▲ CAUTION

Use Piston sizes recommended by the outdoor unit manufacturer whenever possible. The piston should be sized according to the capacity of the outdoor unit.

▲ WARNING

Failure to install the proper piston can lead to poor system performance and possible compressor damage.

7.1.1. Installation of Piston / Fixed Orifice

NOTE: Photos are for basic illustration / reference purposes only. Actual equipment configuration may differ from that shown.

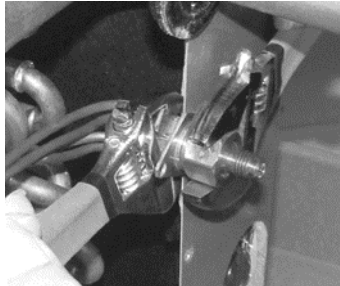


Fig 7.2

I-1. Disassemble flowrater body using two wrenches and unscrewing with a counterclockwise motion.

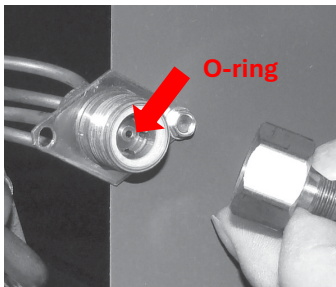


Fig 7.3

I-2. Replace the Teflon O-ring (located between the halves). Discard Schrader if present.

▲ CAUTION

Be aware of the Teflon O-ring. Be sure to replace the O-ring to attain a proper seal. (The Teflon O-ring is located between the two halves of the flowrater).

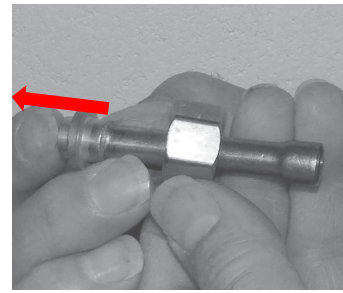


Fig 7.4

I-3. Slide the attachment nut onto the liquid line stub out.

I-4. Braze the stub-out portion to the liquid line and let cool.

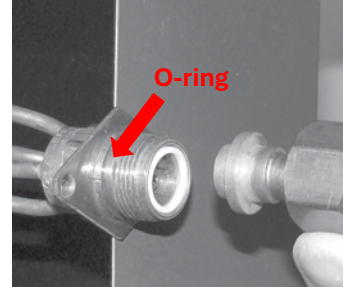


Fig 7.5

I-5. Taking care that the white Teflon seal is still in place inside the flowrater body, firmly seat the stub and screw the attachment nut to flowrater body.

I-6. Tighten nut using no more than 10 ft-lbs of torque. A flare nut open end wrench is recommended to evenly distribute the force across all six sides of the nut to ensure piston body is not deformed.

7.1.2. Piston Replacement

NOTE: Photos are for basic illustration / reference purposes only. Actual equipment configuration may differ from that shown.



Fig 7.6

During some installations, a piston change may be required. If so, the installer MUST change the piston. Use piston sizes recommended by the outdoor unit manufacturer. If a sizing chart is not available, use the piston size chart provided below to size the required piston. The size of the piston is stamped on the piston body (Fig 7.6).

II-1. Evacuate the system as per manufacturer guidelines and recommendations.

II-2. Turn the 13/16" nut once to release any residual pressure in the coil.

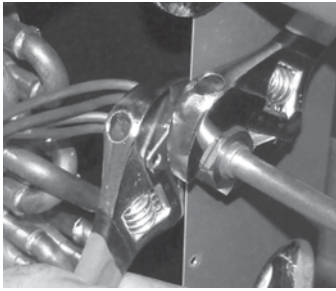


Fig 7.7

II-3. After ensuring that the coil is free of any residual pressure, disassemble the flowrater body completely using two wrenches. Take great care not to distort the feeder tubes. The wrench used to clasp the nut should be turned in counterclockwise direction to unscrew the nut.

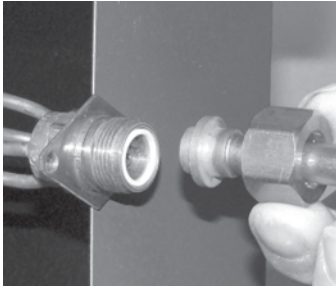


Fig 7.8

II-4. Slide the 13/16" nut over the lineset and separate the two halves of the flowrater.

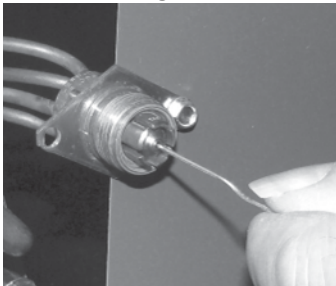


Fig 7.9

II-5. Pull the piston out using a small wire or pick. Verify the piston size (size is typically stamped on the body of the piston - Fig 7.6). If a different piston size is required by the outdoor unit manufacturer, replace the piston using the small wire provided with the piston kit.

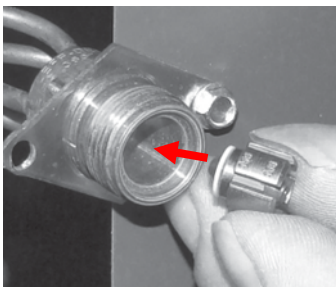


Fig 7.10

II-6. Replace the piston with one of the correct size. Do not force the new piston into the body. Make sure the piston moves freely in body.

▲ CAUTION

Pay close attention to the piston orientation. The pointed end of the piston **MUST** go into the distributor body, towards the coil. Failure to ensure this orientation will cause the piston to be bypassed during operation which might damage the outdoor unit.

II-7. Assemble the two halves correctly and ensure that the Teflon O-ring is present between the two halves (See I-5). Slide the 13/16" nut onto the distributor body.

▲ CAUTION

Be aware of the Teflon O-ring. Be sure to replace the O-ring to attain a proper seal. (The Teflon O-ring is located between the two halves of the flowrater).

II-8. Tighten the nut to a torque of approximately 10 ft-lbs. Do NOT overtighten the nut. Overtightening could crack the nut and/or impede the piston movement during operation.

II-9. If present, slide the rubber grommet back to position to prevent air leakage.

7.1.3 TXV Coils

▲ WARNING

The sensing bulb and TXV body **MUST** be protected from overheating during brazing. The sensing bulb and TXV body must be covered using a quench cloth or wet cloth when brazing. Pointing the brazing flame away from the valve and sensing bulb provide partial protection only.

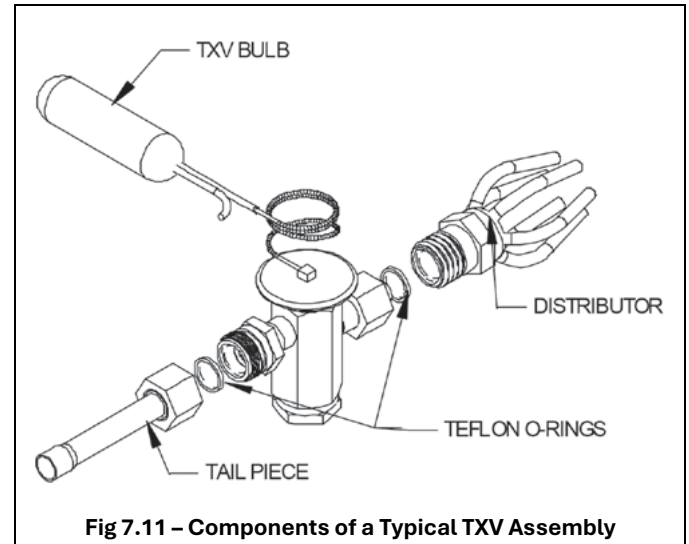


Fig 7.11 – Components of a Typical TXV Assembly

▲ WARNING

Ensure that the TXV selected is compatible with the refrigerant used in the outdoor system. The TXV body is marked with R410a, or R22.

▲ WARNING

The valves should be sized according to the capacity of the outdoor unit. Failure to install the right valve can lead to poor performance and possible compressor damage.


I. TXV Bulb Horizontal Mounting

The orientation and location of the TXV bulb has a major influence on the system performance.

▲ WARNING

Ensure that the TXV bulb is in direct contact with the suction/vapor line. Gap between the bulb and tube should be avoided. Failure to do so will impair the proper functioning of the TXV valve.

It is recommended that the TXV bulb be installed parallel to the ground (on a horizontal plane). The bulb position should be at 2 o'clock or 10 o'clock. Fig. 8.12 shows the recommended position for the TXV bulb installation in the horizontal plane.

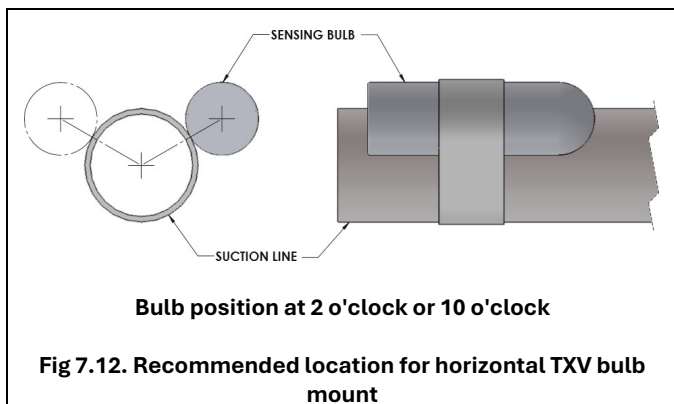


The TXV sensing bulb **SHOULD** be mounted on the suction line approximately 6" from the TXV or coil housing using the metal clamp provided. In order to obtain a good temperature reading and correct superheat control, the TXV sensing bulb must conform to **ALL** of the following criteria:

1. The sensing bulb **MUST** be in direct and continuous contact with the suction line.
2. The sensing bulb should be mounted horizontally on the suction line.
3. The sensing bulb **MUST** be mounted at the 2 o'clock or 10 o'clock position on the circumference of the suction line.
4. The sensing bulb **MUST** be insulated from outside air.

A properly mounted sensing bulb will prevent false readings caused by liquid refrigerant that may have formed inside the suction/vapor line. Insulation will protect the sensing bulb from false readings due to contact with warm air.

II. TXV Bulb Vertical Mounting

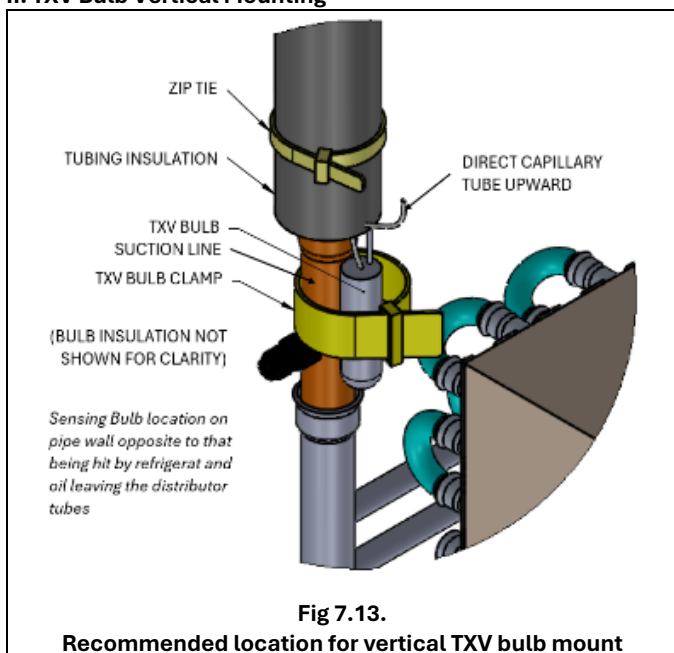

As recommended in Section 7.12, the TXV sensing bulb should be mounted in a horizontal plane in relation to the suction/vapor line. However, some installation configurations may require that the sensing bulb be mounted vertically. In this instance, place the bulb opposite the piping wall being hit by refrigerant and oil leaving the distributor tubes, and with capillary tubes directed upwards as shown in Fig. 7.13.

▲ CAUTION

If the TXV sensing bulb is mounted vertically; the capillary **MUST** be directed upwards. The bulb must be mounted on the wall opposite to that being directly hit by the refrigerant and oil leaving the distributor tubes.

III. Field-Installed TXV Retrofit

Note: Photos are for basic illustration purposes only. Actual equipment configuration may differ from that shown.


▲ WARNING

Do not attempt to touch brazed joints while hot. Severe burns may result.


When installing an expansion valve, it is not necessary to slide the coil out of the housing.



III-1. Disassemble the flowrater body using two wrenches. Unscrew the body with a counterclockwise motion.

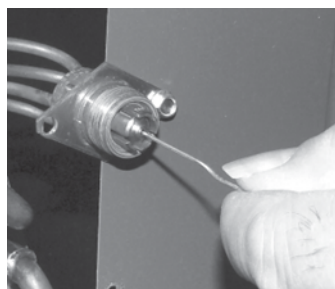


III-2. Remove the existing flowrater piston using a small wire or pick.

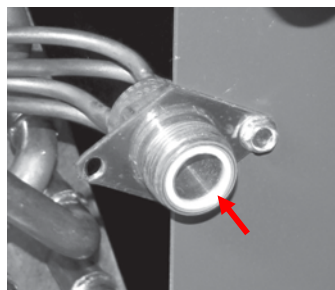


III-3. Replace the Teflon O-ring seal in place (located between the halves).

III-4. Inspect the TXV box to confirm that the valve is compatible with the refrigerant in the system.

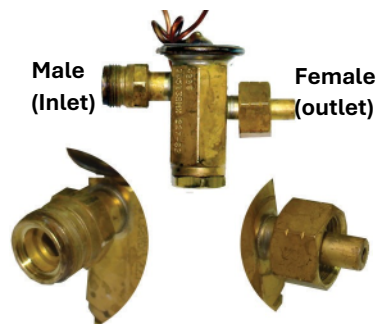


III-5. Remove the valve from the box and note the location of the inlet side (threaded male port) and the outlet side (female swivel nut port).

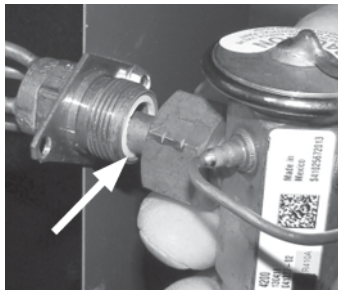

III-6. After ensuring that the Teflon O-ring seal is still in place inside the flowrater body, screw the female swivel nut onto the flowrater body.

III-7. Slide attachment the nut onto the liquid line stub out (See Section 7.1.1, I-3, Fig. 7.4)

III-8. Braze the stub-out portion to the liquid line and let cool.

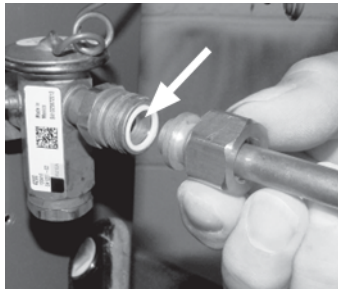


III-9. Remove the additional Teflon O-ring seal from the box and place on the shoulder just inside the TXV inlet port. Screw the nut attached to the stub-out portion of the flowrater body onto the inlet port of the TXV.


III-10. Tighten all connections taking care to use proper back up. Tighten the nut to a torque of approximately 10-30 ft-lbs.

III-11. Remove the valve identification sticker from the valve and place it adjacent to the Aspen model number on unit name plate.

III-12a. Some Aspen coils come with a Schrader valve on the suction line. **If a Schrader port is present:**

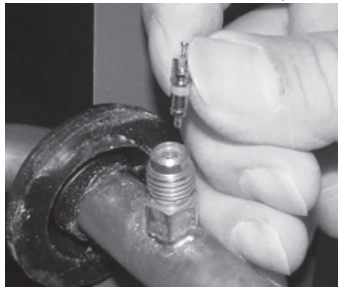

A. Remove the valve stem from the Schrader port mounted on the suction line.

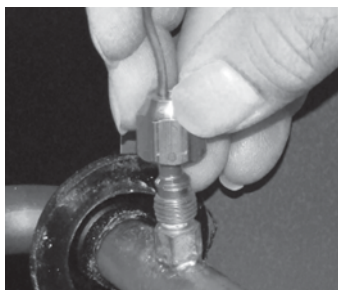

B. Screw flare nut on TXV equalization tube on to the Schrader valve stem.

▲ CAUTION

Using a non-bleed expansion valve may require the use of a hard-start kit. Follow the outdoor unit manufacturer's guidelines.

8. LEAK CHECK / STANDING PRESSURE TEST / VACUUM TEST

8.1. Standing Pressure Test

1. Following outdoor unit manufacturer instructions and recommendations, Using dry nitrogen or dry helium, pressurize the field piping and indoor coil to the lower of the maximum operating pressures listed on the nameplates of the indoor and outdoor units (likely 600 psi).
2. The test pressure after removal of the pressure source shall be maintained for at least one (1) hour no decrease of pressure indicated by the test gauge, with the test gauge resolution not exceeding 30 psi.
3. Check for leaks by using a soapy solution at each field-made brazed joint and screw-on line connections. A leak will produce bubbles in the soap solution. No refrigerant shall be used for pressure testing to detect leaks.

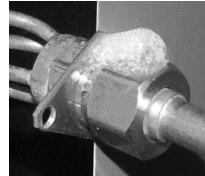


Fig 8.1

4. If any leaks are discovered, remove nitrogen pressure and repair leaks. Repeat steps 1-3.

8.2. Vacuum Test

Important: Do not open the service valves until the refrigerant lines and indoor coil leak check and evacuation are completed.

1. Evacuate until the micron gauge reads no higher than 350 microns, then close off the valve to the vacuum pump.
2. Observe the micron gauge. Evacuation is complete if the micron gauge does not rise above 500 microns in one (1) minute and 1500 microns in ten (10) minutes.
3. Once evacuation is complete, blank off the vacuum pump and micron gauge, and close the valve on the manifold gauge set.
4. All procedures for charging the system with refrigerant shall be according to the instructions provided by the manufacturer of the outdoor unit.

Important: Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks.

After charging the system, all indoor field-made joints of the field piping shall be checked for refrigerant leaks using an electronic leak detector calibrated for R410a or R22 (depending on the application) having a sensitivity of 5 grams per year or better.

With no leaks or weak connections present, evacuate the system and charge as per the outdoor unit manufacturer instructions and specifications.

▲ CAUTION

When handling or manipulating the equalizer tube, take great care not to kink or make extreme bends in the tubing.

9. ELECTRICAL LINE VOLTAGE WIRING

▲ WARNING

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury, or death.

▲ WARNING

Before obtaining access to terminals, all supply circuits must be disconnected.

▲ WARNING

A fused disconnect switch must be field provided for the unit to be in compliance with UL 60335-2-40 Clause 7.12.2.

These units are designed for single phase 120 volts, 60 HZ power supply. Wire selection and wiring must be in accordance with the latest edition of the National Electric Code, or in Canada the Canadian electrical Code, and local codes to determine correct wire sizing. Unit terminals are designed to accommodate copper and aluminum wiring. If aluminum wiring is used: All applicable local and national codes must be followed please observe special precautions relative to sizing, wire connections and corrosion protection.

Line voltage wiring should be routed through the access holes at the top of the air handler. To minimize air leakage, seal the wiring entry point on the outside of the unit. Proper electrical conduit connection fittings should be used. Connect the power wiring to the line side connections on the air handler. The electrical ground wire should be connected to the grounding lug. Ensure both the field supplied ground wire and air handler GREEN ground wire are both secured to the grounding lug of the air handler.

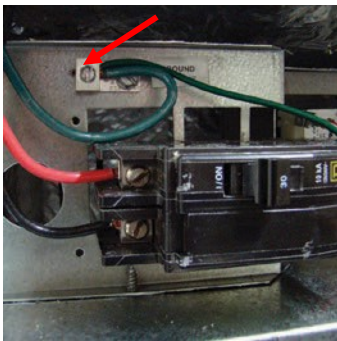


Fig 9.1

10. LOW VOLTAGE CONNECTIONS

A 24 V power supply is provided by an internally wired low voltage transformer that is standard on all models. See the Wiring diagram, Fig. 14.1

Connect the field wiring at the pigtails supplied with the air handler as specified in Wiring diagram, Fig. 14.1. To air leakage, seal the wiring entry point at the outside of the unit.

▲ NOTICE

All wiring must comply with local and national electrical code requirements. Read and heed all unit caution labels.

10.1. Single Stage Cooling

The air handler comes factory setup for a single stage cooling system.

During cooling mode operation, the indoor blower G wire will energize a time delay relay inside the air handler. After a short time delay period, the time delay relay will send out a 24-volt signal to the low voltage terminal on the motor. Fan delay periods are 7 seconds ON delay and 65 seconds OFF delay. (See wiring in Section 14)

The Y wire from the thermostat is not connected at the air handler. This wire goes directly to the outdoor unit 24 volt wiring to turn on the outdoor condensing unit when a call for cooling takes place. The 24-volt common for the outdoor unit circuits is connected at the air handler Brown wire.

10.2. Two Stage Condensing Units

If the outdoor condensing unit is a two-stage model, a field provided Y2 wire can be connected to the motor using an electrical spade connector. The number 4 and 5 terminals on the motor are speed taps that will increase the blower speed for second stage cooling operation. Both the G and Y2 terminals will be energized at the same time during a call for second stage blower speed operation. The motor will run at the speed where the Y2 wire is connected (Fig 10.2).

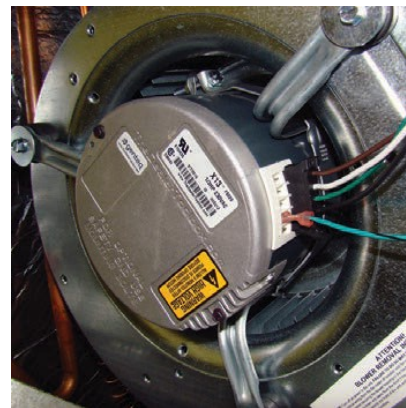


Fig 10.2

Operating CFM based upon each speed tap number is shown on the electrical wiring diagram of the unit. Final air volume adjustments should be made by referencing total external static pressure (Tables 11.2a below).

11. AIR VOLUME ADJUSTMENT

Air volume needs to be set to the level recommended by the outdoor unit equipment manufacturer. Most systems will require around 400 CFM of indoor air for every 1 ton of system cooling capacity. The air volume must be set prior to attempting system charge.

The LGM Series uses a constant torque ECM Motor. This motor will try to maintain proper motor torque to achieve programmed air volume levels at varying levels of external static pressure. The air volume level produced by the air handlers at varying external static pressure levels is shown in Table 11.2a and 11.2b.

Use a Magnehelic Gauge with a 1" scale and two static pressure tips to measure the static pressure during the air volume adjustment procedure (Fig. 11.1). The high port static pressure tip should be placed in the supply duct near the outlet of the air handler. The low port static pressure tip should be placed in the return air duct near the entrance to the air handler. The factory provided air filter should be in place inside of the air handler.



Fig 11.1

- 11.1.1. Select a starting speed tap from the CFM table. The blower motor has selectable speed taps labeled 1 through 5 (Fig. 11.2). The speed taps are energized by 24 volts received from the time delay relay. When two stage cooling units are used, both the first and second stage fan speed taps will be energized at the same time. The motor will run at the speed generated at the highest motor speed tap.



Fig 11.2

- 11.1.2. Call for fan only operation at the thermostat.
- 11.1.3. Read the external static pressure level on the Magnehelic gauge.
- 11.1.4. Make speed tap selection changes to get the air volume as close as possible to the required level.
- 11.1.5. If the static pressure is above 0.5" w.c., excessive turbulence or duct friction needs to be reduced. (Obstructions in the duct system can also cause excessive static pressure.)
- 11.1.6. When proper air volume is established, move on to the charging procedure.

TABLE 11.2a – LGM Airflow Table – High Efficiency

MODEL	SPEED TAP	CFM VS EXTERNAL STATIC									
		0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
LGM24A-E	T5	1030	1000	975	945	910	880	865	830	795	750
	T4	975	945	910	880	865	830	795	775	715	700
	T3	845	810	780	755	725	705	665	635	600	550
	T2	775	745	725	700	665	645	610	575	525	465
	T1	645	620	590	565	550	510	480	420	370	330
LGM36L	T5	1250	1225	1200	1175	1150	1125	1050	960	-	-
	T4	1160	1140	1115	1090	1075	1030	1000	975	900	-
	T3	925	900	865	845	810	775	745	710	695	650
	T2	810	770	740	710	680	655	620	590	550	510
	T1	650	640	610	575	540	510	475	420	380	345
LGM24F-M LGM36A-E LGM36K-M LGM48K	T5	1320	1300	1285	1265	1225	1200	1165	1130	1100	1070
	T4	1150	1130	1115	1090	1060	1020	975	945	880	810
	T3	930	910	875	845	800	765	675	625	590	540
	T2	825	790	755	720	675	600	550	510	485	440
	T1	745	725	675	645	565	525	480	445	400	350
LGM48L	T5	1375	1340	1315	1300	1255	1200	1150	1120	1090	1050
	T4	1175	1150	1125	1075	1045	990	960	900	845	-
	T3	915	900	880	850	800	765	705	665	620	590
	T2	850	830	780	730	675	635	585	550	510	450
	T1	725	705	675	620	565	530	485	460	415	380
LGM36F-J LGM48A-E LGM60A-E	T5	1690	1650	1630	1610	1600	1590	1570	1550	1515	1500
	T4	1580	1460	1435	1420	1400	1370	1350	1325	1275	1250
	T3	1300	1275	1260	1240	1200	1165	1130	1100	1075	1050
	T2	1175	1160	1130	1090	1050	1000	960	930	900	860
	T1	1020	975	945	900	850	810	775	715	695	650
LGM60C	T5	1750	1730	1695	1655	1630	1570	1520	1475	1450	1415
	T4	1560	1520	1475	1435	1435	1375	1350	1325	1275	1250
	T3	1350	1300	1275	1225	1200	1175	1125	1100	1060	1030
	T2	1175	1140	1100	1075	1050	1000	975	928	895	790
	T1	990	940	910	880	850	790	775	675	620	600
LGM60K-M	T5	2010	1980	1960	1935	1910	1880	1850	1820	1785	-
	T4	2000	1970	1950	1925	1900	1870	1840	1810	1775	1750
	T3	1885	1860	1835	1800	1780	1745	1715	1685	1650	1605
	T2	1575	1540	1505	1470	1425	1390	1345	1305	1260	1215
	T1	1370	1335	1285	1250	1200	1150	1095	1020	955	915
LGM48F-J LGM60F-J	T5	2130	2090	2050	2005	1965	1920	1875	1855	1830	1780
	T4	1990	1950	1910	1860	1815	1775	1745	1710	1675	1635
	T3	1815	1760	1725	1675	1615	1600	1560	1520	1475	1415
	T2	1635	1595	1560	1500	1435	1415	1370	1300	1200	1125
	T1	1480	1435	1370	1325	1275	1230	1150	1040	980	925

TABLE 11.2b – LGM Airflow Table – Standard Efficiency

MODEL	SPEED TAP	CFM V. EXTERNAL STATIC								
		0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9
LGM23	T5	880	850	815	775	730	685	635	550	510
	T4	820	790	760	740	705	650	610	525	485
	T3	760	730	700	675	645	615	575	490	435
	T2	705	680	650	615	590	560	535	465	385
	T1	650	620	600	575	540	515	475	425	360
LGM35	T5	1220	1195	1165	1140	1115	1085	-	-	-
	T4	1140	1115	1085	1055	1030	995	965	935	900
	T3	935	900	875	840	815	775	745	705	675
	T2	815	785	755	725	685	650	615	590	565
	T1	695	650	615	580	540	515	475	435	400
LGM47/59	T5	1915	1880	1850	1815	1775	1740	1705	-	-
	T4	1815	1775	1740	1700	1665	1625	1585	1545	1505
	T3	1525	1485	1440	1395	1350	1300	1250	1200	1145
	T2	1290	1255	1205	1155	1100	1140	995	935	865
	T1	925	875	815	735	650	565	525	475	420

NOTE:

- Airflow data indicated is at 120V, front return, dry coil conditions only; tested without filters, and without electric heat installed.
- Air handler units are tested to UL60335-2-40 standards up to 0.6 in. w.c. external static pressure.
- The above charts are for information only. For optimal performance, external static pressures of 0.2 in. w.c. to 0.5 in. w.c. are recommended. Heating applications are tested at 0.5 in. w.c. external static pressure. For satisfactory operation, external static pressure must not exceed value shown.

- Airflow data shown is from testing performed at 120 Volts LGM units are equipped with a standard ECM constant torque motor.
- The above data can be used for airflow at other distribution voltages.

12. SYSTEM CHARGING

▲ WARNING
Units designed for use with R410a or R22 refrigerant MUST be charged with R410a or R22 refrigerant.

▲ CAUTION
An improperly charged system will likely cause loss in system performance and may damage the compressor.

▲ CAUTION
Refer to outdoor unit manufacturer's charging guidelines and recommendations. The recommendations given below are general in nature and are NOT to supersede outdoor unit manufacturer specifications.

Where addition of charge is required to complete installation, instructions on how to determine the additional REFRIGERANT CHARGE and how to complete the REFRIGERANT CHARGE on the label provided by the outdoor unit manufacturer adjacent to the nameplate if the compressor bearing unit. Interconnecting refrigerant piping length and diameter shall be taken into consideration.

12.1 TXV Coils:

If the unit is equipped with a **fixed TXV**, add refrigerant until the subcooling measures at the outdoor unit liquid line matches the subcooling recommendations of the outdoor manufacturer. If the charge is unavailable charge the unit to a subcooling value of 8°F +/- 1°F.

If the unit is equipped with an **adjustable TXV**, add refrigerant until the subcooling measures at the outdoor unit liquid line matches the subcooling recommendations of the outdoor manufacturer. If the charge is unavailable charge the unit to a subcooling value of 8°F +/- 1°F.

▲ NOTICE
When adjusting the TXV, the valve stem or adjusting screw should not be adjusted more than a ¼ turn at a time. To adjust superheat, turn the valve stem clockwise to increase and counterclockwise to decrease.

- 12.1.1. If subcooling and superheat are low, adjust TXV to 8°F +/- 1°F superheat, then check subcooling.
- 12.1.2. If subcooling is low and superheat is high, add charge to raise subcooling to 8°F +/- 1°F then check superheat.
- 12.1.3. If subcooling and superheat are high, adjust TXV valve to 8°F +/- 1°F superheat, then check subcooling.
- 12.1.4. If subcooling is high and superheat is low, adjust TXV valve to 8°F +/- 1°F superheat and remove charge to lower the subcooling to 8°F +/- 1°F.

The TXV should NOT be adjusted at light load / ambient conditions of 60°F or below.

12.2. Fixed Orifice / Piston - Flowrator Coils


Add refrigerant until the superheat measured at the outdoor unit suction/vapor line matches the superheat from the chart below.

Outdoor Temp	Superheat		
°F D.B.	Min	Nom	Max
65	30	35	40
70	26	30	34
75	21	25	29
80	17	20	23
85	12	15	18
90	8	10	12
95	4	5	7
100			

13. FINAL SYSTEM CHECKOUT

- 13.1.1. Make certain all cabinet openings are properly sealed, and any grommets moved during installation are moved into proper place.
- 13.1.2. With cooling system operating, check for condensate leakage.
- 13.1.3. Perform leak detection inspection of refrigerant circuit and connecting piping.
- 13.1.4. Secure all cabinet doors. All panels must be in place and secured. For airtight application, all gaskets must remain intact on all surfaces as shipped with the unit at prescribed locations to achieve 1.4% low leakage.

14. WIRING DIAGRAMS

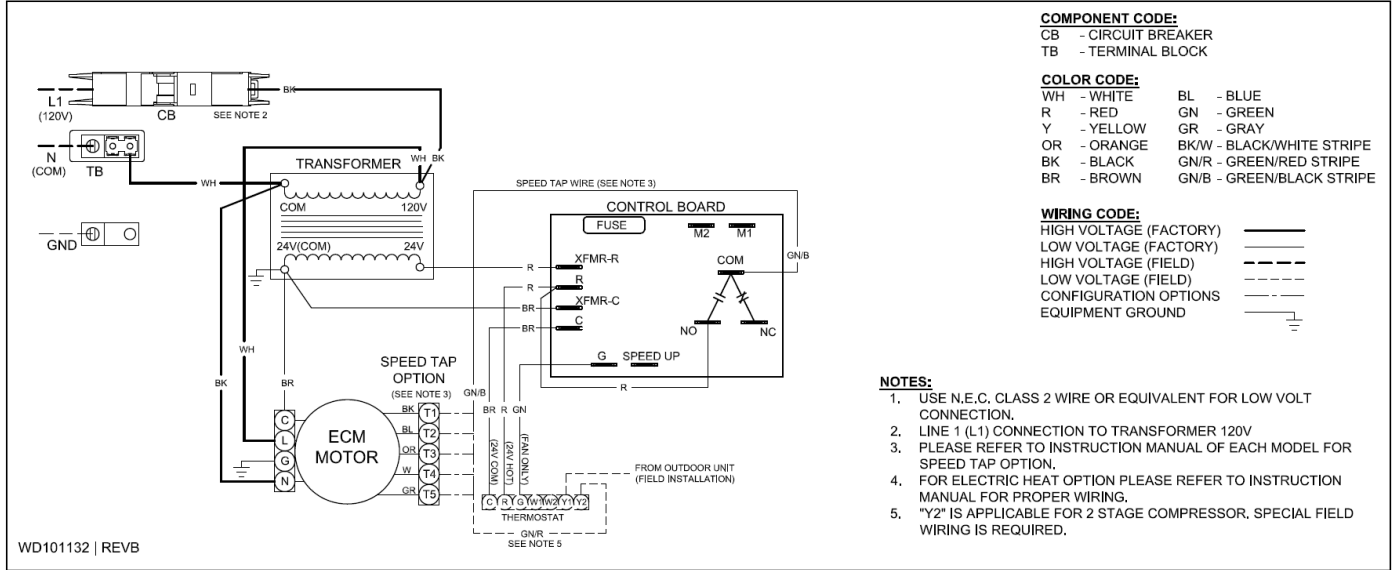

NOTE: Wiring Diagram is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

Figure 14.1 – ECM Motor



373 Atascocita Rd., Humble, TX 77396 • Phone: 281.441.6500 • Toll Free: 800.423.9007 • Fax: 282.441.6510

www.aspenmfg.com

Subject to change without notice and without incurring obligation.

© Copyright 2024 Aspen Manufacturing. All Rights Reserved